

Provision DVR Hardware SOP

Overview

This document outlines how Provision DVR devices connect to Samsara and how to configure them.

4-Channel Provision DVR

- Uses the HD Camera Connector directly to communicate with Samsara.
- No additional adapters are required.



8-Channel Provision DVR

- Requires an HDMI to AHD Adapter.
- Connect adapter to the Samsara HD Camera Connector.
- Ensures proper communication between DVR and Samsara.





Login Credentials (8-Channel DVR)

Username: admin

Password: doitall

Configuration Notes

- Access settings to select which cameras are displayed.
- Adjust number of visible camera feeds as needed.
- Verify connections before troubleshooting

Field Access Instructions

Login Procedure

1. You need a cell phone or tablet
2. Go to settings and search WIFI
3. You will be looking for the ProVision DVR to connect to
4. Once connected go to the internet and type 192.168.1.254

This will allow you to change the settings on the in-cab display among other things through the DVR.